

STYLEX

Disassembly Document

Model: Free Address - Seat Height Frame

Refer to Stylex website for model variations

Tools Required

- Safety Glasses
- 3/8" Socket or Combination Wrench
- 5/32" Allen Wrench
- Philips Screwdriver or Drill with Philips Bit



Disassembly Steps

Ganging Brackets

Remove all ganging brackets that join frames by unscrewing them from the bottom of the units (Philips head screwdriver).

Undermount Power Units

Remove any undermount power units by unscrewing them from the underside of the seat (Philips head screwdriver).

Seats, Casegoods, Planters

Separate the units from the frame by unscrewing them from the bottom side (Philips head)

-Lockers: Remove door pull and hinges by unscrewing it from the door. (Philips head)

-Planters: Remove planter contents and then remove plastic liner from the planter using the hand holds on the inside.

Frame

Disassemble the frame by unscrewing the hex bolts connecting the rails to the end frames (3/8" socket or combination wrench). Pull the legs from the rectangular tubes and remove the glides.

Contents

Seat Height Frames

(♻️ Denotes recyclable components)

- Seats
- Tabletops
- Cubbies
- Lockers
- ♻️ Locker Hinges
- ♻️ Locker Door Pulls
- Locker Locks
- Planters
- ♻️ Planter Liners
- ♻️ Seat Frames
- ♻️ Ledge Frames
- Frame Glides
- ♻️ Ganging Brackets
- ♻️ Casegood Spanner Bracket
- Power Units
- ♻️ Hardware

