



# Disassembly

**Tools Required:**

- Safety glasses
- 5/32" Allen wrench (included)
- Flat-head screwdriver
- Phillips screwdriver

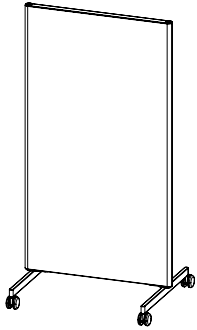

Caster base

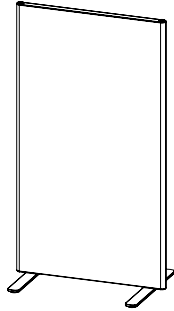

Standard base

**Disassembly Steps**

Disassembly time: 5 minutes. No special training required.

1. Use a flat-head screwdriver to remove top screws (image A).
2. Use a 5/32" Allen wrench to remove bases (image B - Green).
3. Use a Phillips screwdriver to remove cleats (image B - Red).



Image A

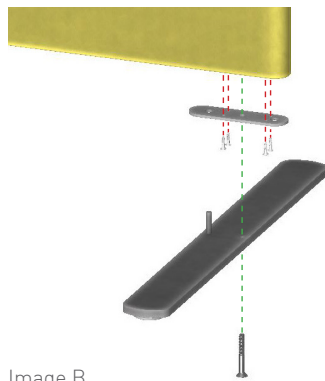













Image B

Part Specification (with material)

Screen (steel, foam, plastic, plywood, MDF)	
Cleat (steel)	
Cleat screw (steel)	
Standard base (steel)	
Caster base (steel)	
Casters (steel, nylon)	
Bottom ganging bracket (steel)	
Base screw (steel)	
Top ganging bracket (steel)	
Top screw (steel)	
Adjustable glide (steel, POM plastic)	
Dry erase sign (steel)	